

Product loading / unloading instruction

For va-Q-proof 11-74 Dry Ice

Note:

Dry Ice is a hazardous substance. Before using a va-Q-proof with dry ice, undertake a risk assessment with your health and safety department to ensure all appropriate safeguards according to local regulations are in place. Make sure to handle the box only in well ventilated areas. When handling dry ice wear insulated gloves and safety goggles.

For the product loading / unloading process, the va-Q-proof 11 is shown exemplary in the figures. The following loading / unloading instruction is valid for: **va-Q-proof 11 – 74**.




Step I

Open the lid of the va-Q-proof.




Step II

Take out the lid box that is on top by grabbing the handles of the flaps.

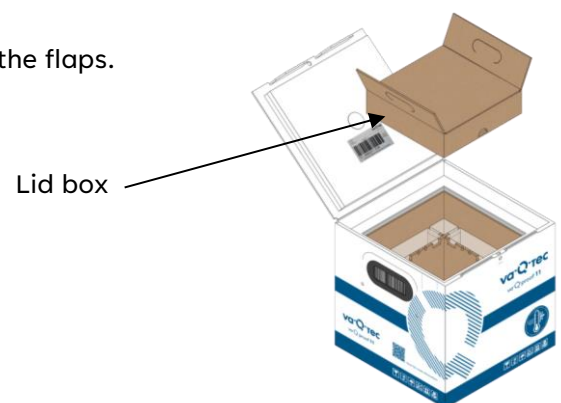

Step III

Load / unload the product.

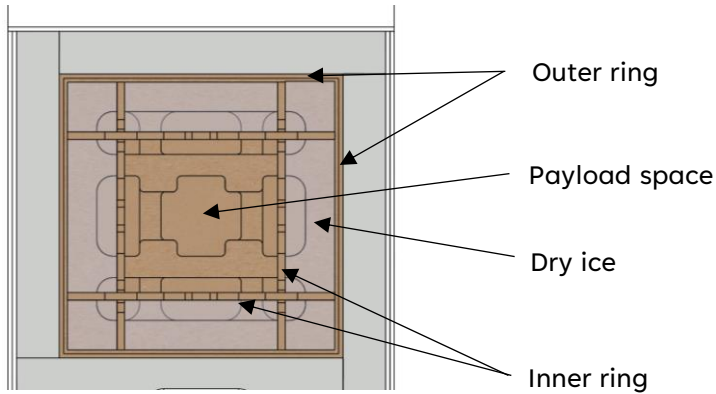

Step IV

Place the lid box back onto the inner ring and fold the flaps with the handles of the lid boxes down, so they create an even surface.



Step V

Close the lid of the va-Q-proof by folding the flaps inwards and sliding these into the respective slots of the outer shell and seal the lid with adhesive tape at the marked position.

